### F Series SE Maintenance Schedule

#### **Every 3 Loads**

Clean both air lint filters. Clean button trap basket.

### Each Day

# Weekly

Take apart filter and wash out embedded lint, re-assemble and put back in place

Clean separator.

Clean Dual Fan Refrigeration Coils.

## Filter Change

Change over valves to secondary filter. Open drain valve of dirty filter. Allow to drain for a couple of weeks, then change filters.

### **Quarterly**

Check drive belt tension, Mounting and bearing housing bolts, Adjust and tighten as necessarily. Clean separators manually remove glass, wipe out after draining. Clean Inverter.

### Semi-Annual

Drain Base Tanks and Clean out

#### Annually

Clean Evaporator Coil

<sup>\*</sup> The computer can be programmed to have a message appear on the screen Informing the operator that it is time to run these maintenance programs.